


AQUA TEK

INNOVATIVE WATER PRODUCTS

Ozone System

Series ATAI03

**Iron, Manganese & Sulfur
Water Filter**

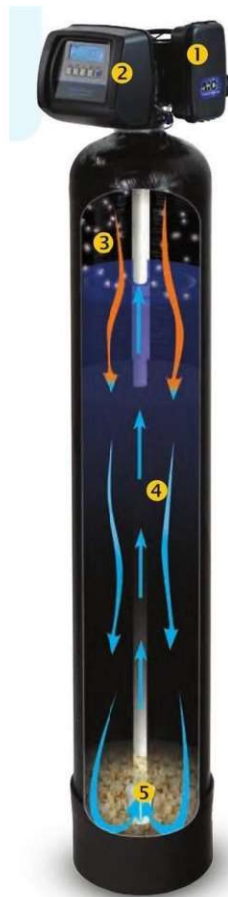

Installation & Start-up Manual

Table of Contents


About The Sulfur and Iron Water Filter	4
Introduction to Usage	5
Installation Instructions	6
Start Up Instructions	9
Troubleshooting the Water Filter	13
Bypassing the Filter	17
Manufacturer's Warranty	18

About the Sulfur and Iron Filter



How does my Ozone filter system work?

This filter uses a natural Zeolite media material is highly effective for removal of Manganese, Iron & Hydrogen Sulfide. The filter uses an Ozone air chamber within the tank to capture and oxidize the elements and then filter them through the media bed. The automatic backwashing cycle will clean the media of the Manganese, Iron & Sulfur leaving the system free of Viruses and Bacterias.

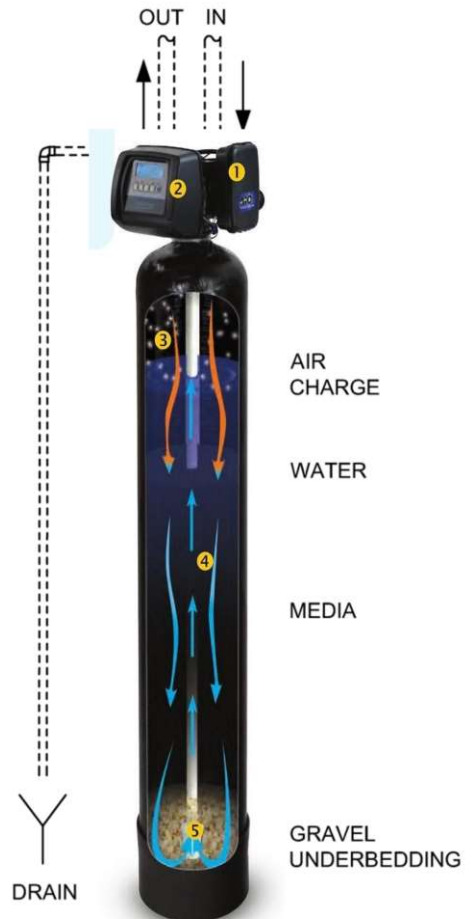

Introduction to Usage

INTRODUCTION TO USAGE

This manual is intended to be a practical reference guide. It contains information about operating this water filtering system—including installation and start-up instruction for the installer and programming, regenerations, settings and troubleshooting for the homeowner.

THE LIFE OF AN SULFUR AND IRON FILTER

The Sulfur and Iron Water Filter is designed for long-term use. To determine when to change the filter media, contact your dealer. Every system encounters different water conditions therefore every filtration system will have different timetables for replacing the filter media. Make sure you have a water technician change your filter media and periodically test for effectiveness.

MAINTENANCE AND CARE

It is important to maintain your sulfur and iron filter. To properly maintain your system have a water technician change the filter media when necessary. *(Check with your dealer.)* If your filter media is not working properly, or is not replaced frequently enough, it has potential to grow bacteria that can end up in your water system. A water technician can tell you how often the filter media needs replacing.

Maintenance and regular care of your water filter is very important!



Installation Instructions

Pre-Installation Checklist


1. A standard electrical outlet (120V/160Hz) must be located within 12' of installation site.
2. A functioning floor drain, washer stand pipe or suitable location for waste water discharge must be located within 20' of installation site.
 - a. All plumbing should be done in accordance with local plumbing codes. The pipe size for the drain line should be a minimum of 1/2". Backwash flow rates in excess of 7 gpm or length in excess of 20' require 3/4" drain line.
3. A working pressure reducing valve must be installed on the inlet water line that supplies the water filter.
4. This water filter is not designed to operate with hot water.
5. The temperature at the location of the water filter must never be below 40°F.

Note: The warranty is void if the system is exposed to water pressure in excess of 100 psi or water temperatures in excess of 95°F.

Installation

1. **Floor Space:** Make sure the floor space that has been selected to install the water filter is clean and on a level surface.
 - 1a. In some instances, your media is shipped in it's own container. Place media tank in relative position of end install, and follow instructions "Installation & Replacement of Media Pak" on Page 6a of this manual.
2. **Connection Kit:** The standard connection kit supplied with the water filter will be a 1" NPT Elbow connection kit. (See Figure 1) Other connection kits are available. This kit will consist of the following:

Figure 1

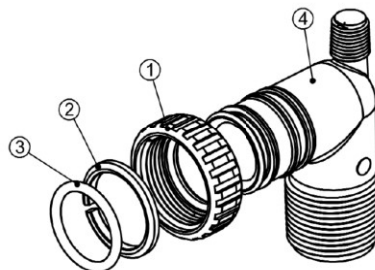

Installation & Replacement of Media Pak

These instructions are to help guide you through the steps for initial installation or replacement of the media in your filter or softener. Please check to ensure that all the parts have been included by reviewing the labels that are attached to the filter (e.g. xxx bed - container 1 of 3, 2 of 3, 3 of 3). Container may contain more than one media. If you have any questions regarding the installation or replacement of your media bed, please contact your local dealer for assistance.

1. Loading the Media Pak

Place the distributor tube into the media tank and plug the end of the distributor tube with a tape to prevent media from entering it. Make sure that distributor tube is inside the tank and seated in a depression at the bottom of the tank. (If replacing the media, inspect the distributor for any damage to the slots in the cone or plugging - clean if necessary.)

Plug tube with a tape

Remove after media is loaded.

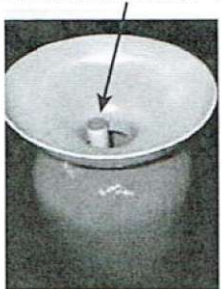


Fig. 1 - The riser (distributor) remains inside the tank seated in the depression at the bottom. The riser should be capped to prevent resin beads from getting inside.



Fig. 2 - Fill support bed first (if supplied)



Fig. 3 - The media will not always spill down inside the tank and may need to be swept inside

Plug the media tube with tape to prevent the media from getting inside the tube. Pour the media into the tank. A large funnel makes filling the tank easier and neater. (An empty 1 gallon or container with the bottom cutout makes a good funnel.) Fill support bed (if supplied) first. During the filling process, ensure the distributor tube stays on the bottom of the tank, reasonably centered.

It is advised to wear a dust mask to avoid inhaling media dust.



2. Placing the Unit in Service

Once the tank is filled, remove the tape from the distributor and clean off the top of the tank. Place the control valve onto the tank, ensuring the distributor fits into the valve properly. Tighten the valve onto the tank using moderate force. Applying some household liquid soap to the main seal O-ring will ease assembly. Continue, following installation procedures. Follow the installation and operating instructions for system start-up found in your Owners Manual and remember >>> slowly fill the tank in the backwash position and allow it to flush the air and fine particles down the drain until the drain water appears clear (about 20 minutes). Once the drain runs clear, plug in the electrical cord, open the inlet valve fully and allow the valve to finish its cycle. Check for any leaks and reset the time of day on your controller.

The Following Instructions are for Media Replacement Only

1. Depressurizing the Unit

The first step is to loosen the bed and depressurize the unit. Place the unit into the backwash position and keep it there by unplugging the unit from the power supply. Allow it to backwash for several minutes to loosen the bed. To depressurize, simply shut off the water supply to the unit either at the main or use the bypass to the unit.

2. Removal of Old Media

Next remove the control valve and empty the tank. You may have to disconnect plumbing from the inlet and out let of the valve, depending on the type of valve your filter or softener has. insert a piece of 1/2" flexible hose into the distributor and siphon the water into the drain. Remove the distributor tube from the tank. Flush out all the contents into a large pail or garbage can by elevating the tank as required (dictated by container used to hold old media). Lay the tank on its side and insert a garden hose into the tank. Make sure the tank is completely empty before proceeding.

Installation Instructions

3. **Plumbing Preparations:** Unscrew the two plastic nuts (#1) and pull on the two brass connectors (#4) to remove them from the bypass assembly. Next remove the white plastic rings (#2) and the O-rings. (#3) See *Figure 1*
 - a. Solder at least 6" of pipe to the brass connectors before reassembly. (See *Figure 2*) After soldering is complete, cool the pipe and connectors. Slide the plastic nuts (#1) over the brass connectors (#4).
 - b. Place the white plastic split rings (#2) into the grooves closest to the end of the brass connectors (#4). Reassembly the connection kit onto the bypass assembly.

Warning: When assembling the installation-fitting package (inlet and outlet), connect the fitting to the plumbing system first and then attach the nut, split ring and O-ring. Heat from soldering or solvent cements may damage the nut, split ring or o-ring. Solder joints should be cool and solvent cements should be set before installing the nut, split ring and O-ring. Avoid getting primer and solvent cement on any part of the O-rings, split rings, bypass valve or control valve.

4. **Plumbing:** When connecting the water filter to the existing plumbing, make sure the inlet water is connected to the inlet of the filter. Arrows on the valve body indicate direction of flow. Make sure the bypass valves are in the correct position See *Figure 3*. An internal check valve is supplied with the system and has already been installed in the inlet of the control valve to ensure that the air charge in the top of the tank does not escape backwards out the inlet.

Note: All plumbing should be done in accordance with local plumbing codes.

Warning: The control valve, fittings and/or bypass are designed to accommodate minor plumbing misalignments but are not designed to support the weight of a system or the plumbing.

Figure 1

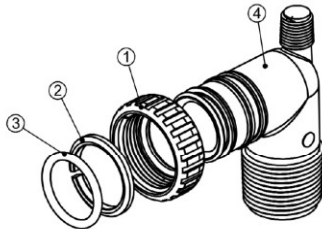


Figure 2 (Optional)


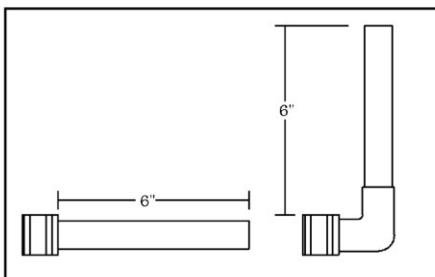



Figure 3

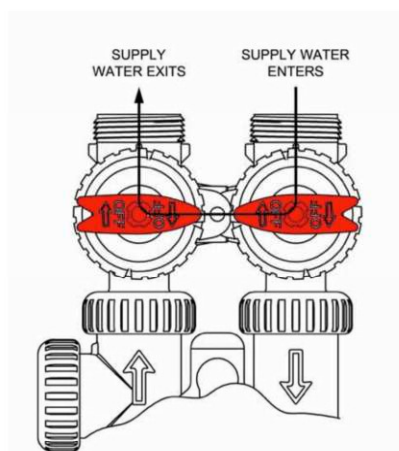

Installation Instructions

5. **Locate Polytube Insert:** Now that the water filter is connected to the existing plumbing, the drain line may be connected. First, locate and remove the polytube insert (#2) from the gray cable on the left side of the control valve.
6. **Connecting the Drain Line:** Slide plastic nut (#3) over the permanent drain tubing and place the polytube insert (#2) into the end of the drain tubing. Insert the drain tubing into the drain elbow fitting (#4) and tighten plastic nut (#3) hand-tight plus 1/2 turn with pliers. **Caution:** Do Not Over-tighten. (See Figure 4)

Figure 4

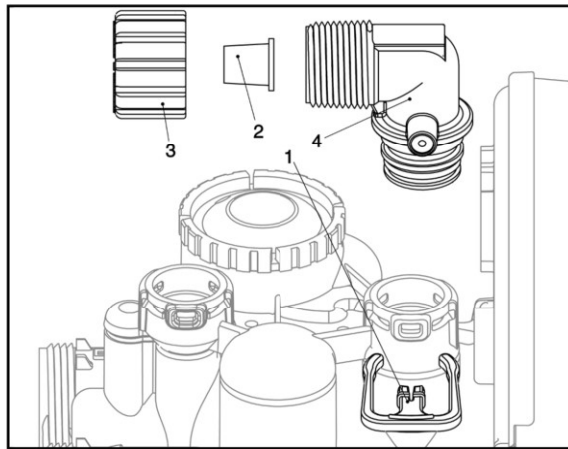

7. **Drain Line Specs:** If the distance from the water filter to the drain is greater than 20' the drain line size must be increased to 3/4". The threads on the drain elbow fitting are 3/4" male NPT and can be used in lieu of the 1/2" plastic nut and insert. If the drain line must run overhead, the maximum height of the drain line should not exceed 8' above the top of the water filter.
8. **IMPORTANT:** Special precautions must be made when connecting the drain line. During backwash, high volumes of air and water escape rapidly, causing a flexible drain line to whip and thrash. Rigid drain piping is highly recommended.

Start-Up Instructions

Start-Up


1. Make sure the bypass is in the position shown in Figure 1.
2. Open a faucet that is being supplied by the water filter. Air and discolored water will be discharged from the faucet.
3. Leave faucet running until water runs clear and turn off faucet.
4. Let the media stand for at least fifteen minutes. This will help saturate the media inside the filter.

Note: Failure to follow the above instructions could result in the media plugging the filter controller.

5. Set the clock to the current time of day. (See page 10)
6. Start the filter into the manual regeneration cycle.
7. Push and hold the REGEN button approximately 6 seconds.
8. Leave the filter in the regeneration cycle to create the air charge necessary for proper function of the filter.

Start-Up of your filter is complete.

Figure 1

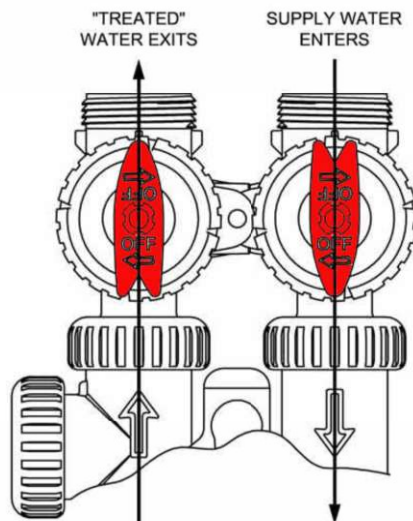

Troubleshooting the Water Filter

Troubleshooting Guide

<u>PROBLEM</u>	<u>POSSIBLE CAUSE</u>	<u>SOLUTION</u>
Timer does not display time of day:	<ul style="list-style-type: none"> a. Transformer unplugged b. No electrical power at the outlet c. Defective Transformer d. Defective PC board 	<ul style="list-style-type: none"> a. Connect power b. Repair outlet or use working outlet c. Replace transformer d. Replace PC Board
The Timer does not display the <i>correct</i> time of day:	<ul style="list-style-type: none"> a. Switched outlet b. Power outage c. Defective PC board 	<ul style="list-style-type: none"> a. Use uninterrupted outlet b. Reset time of day c. Replace PC board
Control valve backwashes at the wrong time of day:	<ul style="list-style-type: none"> a. Time of day is not set correctly b. Time of backwash is set incorrectly. c. Power outages 	<ul style="list-style-type: none"> a. Reset to correct time of day b. Reset backwash time c. Reset valve to correct time of day
The unit is leaking:	<ul style="list-style-type: none"> a. Fittings are loose b. The tank is cracked c. Damaged drain line or hose 	<ul style="list-style-type: none"> a. Tighten fittings b. Bypass unit (<i>See pg. 15</i>) c. Replace drain line or hose
Reduced water flow or pressure:	<ul style="list-style-type: none"> a. Breakdown of the media b. Media has begun to solidify c. Overload of sediment or clogging of media 	<p>For a,b, and c: Bypass unit (<i>See pg. 15</i>) and replace the media. (<i>See dealer to replace media</i>)</p>
Control valve stalled in the backwash	<ul style="list-style-type: none"> a. Motor not operating b. No electrical power at outlet c. Defective transformer d. Defective PC board e. Broken piston retainer f. Broken main or regenerant piston g. Broken drive gear or drive cap assembly. 	<ul style="list-style-type: none"> a. Replace motor b. Repair or use working outlet c. Replace transformer d. Replace PC board e. Replace drive cap assembly f. Replace main or regenerant piston g. Replace drive gear or drive cap assembly.
Control valve does not automatically backwash when REGEN button is depressed and held:	<ul style="list-style-type: none"> a. Transformer unplugged b. No electrical power at outlet c. Broken drive gear or drive cap assembly d. Defective PC board 	<ul style="list-style-type: none"> a. Connect transformer b. Repair or use working outlet c. Replace drive gear or drive cap assembly d. Replace PC board


Control valve does not automatically backwash but does when REGEN button is depressed and held	a. Defective PC board b. Set-up error	a. Replace PC board b. Check control valve set-up procedure
Err - 1001 = Control unable to sense motor movement	Motor not inserted full to engage pinion, motor wires broken or disconnected	Disconnect power, make sure motor is fully engaged, check for broken wires, make sure two pin connector on motor is connected to the two pin connection on the Circuit Board labeled MOTOR. Press NEXT and REGEN buttons at the same time for 3 seconds to resynchronize software with piston.
	Circuit Board not properly snapped into drive bracket	Properly snap Circuit Board into drive bracket and then Press NEXT and REGEN buttons at the same time for 3 seconds to resynchronize software with piston.
	Missing reduction gears	Replace missing gears
Err - 1002 = Control valve motor ran too short and was unable to find the next cycle position and stalled	Foreign material is lodged in control valve	Open up Control Valve and pull out piston assembly and Seal and Spacer Stack Assembly for inspection. Press NEXT and REGEN buttons at the same time for 3 seconds to resynchronize software with piston.
	Mechanical binding	Check Piston and Seal and Spacer Stack Assembly, check Reduction Gears, check Drive Bracket and Main Drive Gear Interface. Press NEXT and REGEN buttons at the same time for 3 seconds to resynchronize software with piston.
	Main Drive Gear too tight	Loosen Main Drive Gear. Press NEXT and REGEN buttons at the same time for 3 seconds to resynchronize software with piston.
	Improper voltage being delivered to Circuit Board	Verify that proper voltage is being supplied. Press NEXT and REGEN buttons at the same time for 3 seconds to resynchronize software with piston.

Err - 1003 = Control valve motor ran too long and was unable to find the next cycle position	Motor failure during a regeneration	Check motor connections then Press NEXT and REGEN buttons at the same time for 3 seconds to resynchronize software with piston.
	Foreign matter built up on Piston and Seal and Spacer Stack Assemblies creating friction and drag enough to time out Motor	Replace Piston and Seal and Spacer Stack Assemblies. Press NEXT and REGEN buttons at the same time for 3 seconds to resynchronize software with piston.
	Drive Bracket not snapped in properly and out enough that reduction gears and drive gear do not interface	Snap Drive Bracket in properly then Press NEXT and REGEN buttons at the same time for 3 seconds to resynchronize software with piston.
Err - 1004 = Control valve motor ran too long and timed out trying to reach home position	Drive Bracket not snapped in properly and out enough that reduction gears and drive gear do not interface	Snap Drive Bracket in properly then Press NEXT and REGEN buttons at the same time for 3 seconds to resynchronize software with piston.
Filter bed becomes contaminated:	a. Incoming water is contaminated causing contamination of the media	a. Bypass the unit (<i>See page 15</i>) Clean tank and replace the media


Bypassing the Filter

Bypassing the filter will reroute the unfiltered water to the fixtures in the house. In effect, your water is no longer filtered. Bypassing the filter is only necessary to isolate the filter in case of contamination, repairs and to stop leaks.

Control Valve in Service Mode

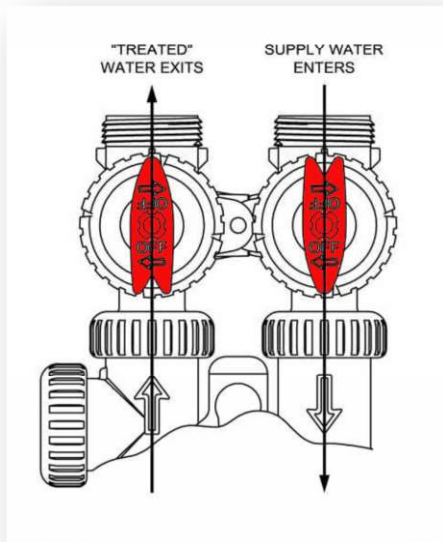

Control Valve in the Bypass Mode

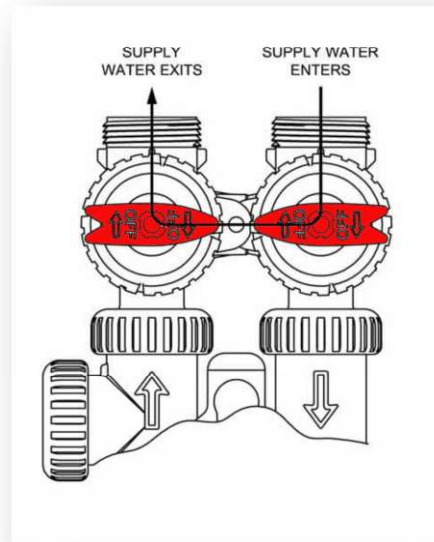

Step 1:

Locate the bypass valve on your filter. It will have two red handles in the shape of arrows. The handle on the left will be facing **AWAY** from the unit. The red handle on the right will be facing **TOWARD** the unit. This indicates that the unit is in the **SERVICE MODE**.

Step 2:

To set the unit in the **BYPASS MODE**, turn both red handles so that they are facing each other. This prevents unfiltered water from entering the unit and reroutes it directly to the fixtures in the house.



Bypassing the filter will allow unfiltered water into your home. Bypassing is for emergencies only!

You have successfully bypassed the filter.